

# Connections For Vehicles With Positive Earth

For This Replacement Unit To Operate Correctly, The Wires Connecting To Pins "X" & "L" May Need To Be The Opposite Of The Unit Removed. Please Check The adjacent Circuit / Connection Diagram And Install The Replacement Unit Accordingly.

## IMPORTANT NOTE:

When You Have Fitted The New Unit, If The Bulbs Illuminate But Do Not Flash, Swap The Wires Connected To Pins "L" & "X" Terminal "X" May Also Be Marked "B"

